JAMESON®

OPERATION AND SAFETY MANUAL

PROFESSIONAL TREE CARE TOOLS

PRUNERS | FIBERGLASS POLES | POLE SAWS

WHEREVER THE JOB TAKES YOU,

COUNT ON JAMESON™

⚠ WARNING

- Hold pruner by base, not blade or hook.
- Work with pole held to the side, NOT pointed into the body.
- Wear head, eye and face protection that meets
- ANSI standards to avoid injury.
- Wear sturdy, protective safety shoes or boots with non-skid soles.
- Maintain secure footing and balance.

DO NOT USE NEAR ELECTRICAL LINES.

JA Pruners with Adapter

Adapters Allow Quick and Easy Replacement of Pruner Head or Pole Saw

Attach Adapter

Remove bolt from Pruner. Insert Adapter, lining up holes on Adapter with bolt holes on Pruner. Insert bolt and tighten.

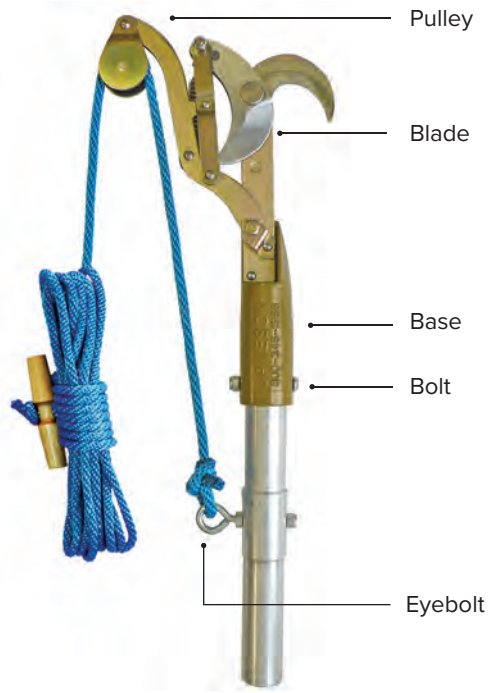

⚠ WARNING

HOLD PRUNER BY BASE - NOT BLADE OR HOOK

Attach Rope

Thread rope end over pulley and tie to eyebolt on Adapter.

JA-14 Fixed Pulley Pruner
JA-14S Swivel Pulley Pruner
JA-34 Big Mouth Pruner

Attach Rope

Thread rope over upper pulley, thread under lower pulley on a dapter and tie end to upper pulley.

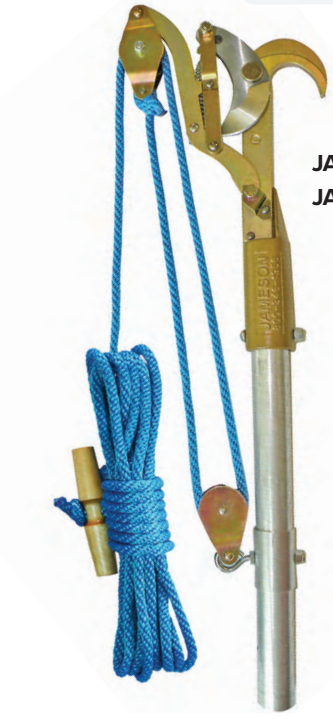

JA-14DP Double Pulley Pruner
JA-34DP Double Pulley Big Mouth Pruner

CARE FOR PRUNER: Wipe down after use to remove moisture and tree sap. Lubricate to repel moisture and prevent rust.

Adapters Allow Quick and Easy Replacement of Pruner Head or Pole Saw

ATTACH SAW BLADE TO PH-11 PRUNER

1 Using flat head screwdriver and wrench, remove screw and nut holding blade.

2 Using flat head screwdriver and wrench, remove screw and nut holding blade.

3 Secure saw blade to pruner with screw and nut.

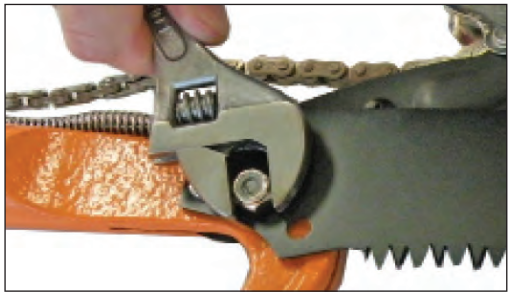

Attach Adapter Bolt Pruner onto Adapter then snap Adapter into Jameson Pole.

Attach Rope Tie rope end to chain pulley's o-ring.

⚠ WARNING

HOLD PRUNER BY BASE - NOT BLADE OR HOOK

PH-11 Pruner accommodates Jameson's SB-1T or SB-2 Teflon Saw Blade, offering the benefit of two tools in one.

PHA-11 Adapter Adapts PH-11 Pruner to Pole's Ferrule

PH-12 Pruner does not accommodate a saw blade.

CARE FOR PRUNER: Wipe down after use to remove moisture and tree sap. Lubricate to repel moisture and prevent rust.

Adapters Allow Quick and Easy Replacement of Pruner Head or Pole Saw

Part Number	Description
PS-3	Offset Blade Mount withCarriage Bolt Fits: SB-2 and SB-4 Blades

Part Number	Description
PS-3FP	Center Blade Mount with Mounting Pin Fits Saw Blades: SB-1C, SB-2, SB-1T, SB-13TE, SB-16TE, SB-16TE-W, SB-13TE-H

Part Number	Description
PS-3F	Center Blade Mount with Carriage Bolt. Fits Saw Blades: SB-1C, SB-13TE, SB-16TE, SB-16TE-W, SB-13TE-H

ATTACH SAW BLADE TO POLE SAW HEAD

PS-3FP with Mounting Pin

1 Remove wing nut and lock washer. Place saw blade over bolt and mounting pin.

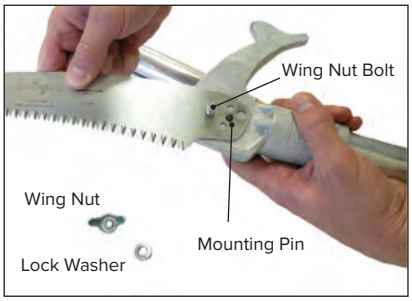

2 Replace lock washer and wing nut, tighten.

ATTACH SAW BLADE TO POLE SAW HEAD

PS-3F / PS-3 with Carriage Bolt

1 Remove wing nut and lock washer. Place saw blade over bolt and mounting pin.

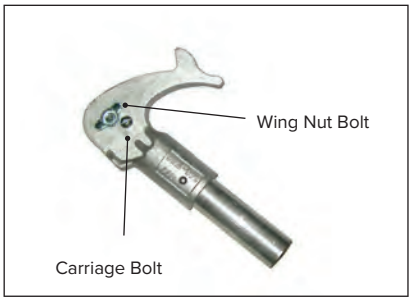

Snap pole saw into pole's ferrule.

CARE FOR SAW BLADES: Wipe down after use to remove moisture and tree sap. Lubricate to repel moisture and prevent rust.

Connecting Poles or Attaching Tool Heads

Lift leaf spring on pole's female ferrule to allow male pole ferrule or tool head adapter to be inserted. Align holes and drop leaf spring's button back into hole for a secure connection.

Female Ferrule

Male Ferrule

LEAF SPRING LOCKING CLIP
for secure connection when attaching multiple poles or tool heads
LEAF SPRING CLIP NOTCH
designed to prevent long term pole connection damage and performance

Extension Pole

Base Pole

For Your Safety And Best Results, Jameson Recommends

Use only Jameson attachments with Jameson poles. Always start with a Jameson Base Pole. Connect Extension Pole to Base Pole. Connect Pole Saw Head or Pruner Head to Extension Pole. For shorter lengths, use Base Pole only with Pole Saw Head or Pruner Head.

⚠ WARNING

Pole Must Be Locked Into Position Before Using

ADJUSTING POLE LENGTH

1 Unscrew threaded collar by turning until loose.

2 Unlock inner lock by twisting upper pole section counter-clockwise, approximately quarter-turn, while holding lower pole section in place. Extend poles to desired length.

LOCK INTO POSITION:

1 Twist upper pole section clockwise, approximately quarter-turn, until inner lock engages (there is an audible click).

Re-attach collar to outer lock, turning until completely secure.

⚠ WARNING

HOLD PRUNER BY BASE - NOT BLADE OR HOOK

ATTACHING ROPE

JA Pruners permanently mounted to pole

1 Thread rope end over pulley and tie to eyebolt on Adapter.

ATTACH SAW BLADE TO POLE SAW HEADS PERMANENTLY MOUNTED TO POLE

1 Remove wing nut and lock washer. Place saw blade over bolt and mounting pin.

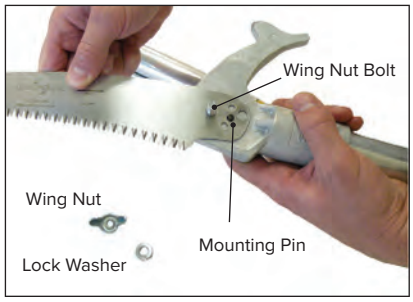

2 Replace lock washer and wing nut, tighten.

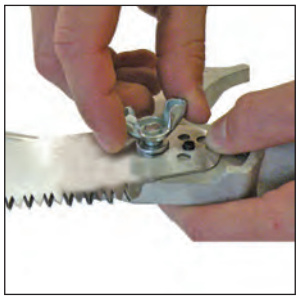

CARE FOR SAW BLADES: Wipe down after use to remove moisture and tree sap. Lubricate to repel moisture and prevent rust.

Warranty

Jameson products carry a warranty against any defect in material and workmanship for a period of one year from date of shipment unless failure is due to misuse or improper application. Jameson shall in no event be responsible or liable for modifications, alterations, misapplications or repairs made to its products by purchaser or others.

This warranty is limited to repair or replacement of the product and does not include reimbursement for shipping or other expenses incurred. Jameson disclaims any other express or implied warranty.